


PROGRAMMING THE miniK 10

The miniK 10 can be customized from factory default settings tailored to your needs.

ACCESSING THE PROGRAM MENU:

Press the **#** button and then enter the 6-digit master password. Press the ***** button. Press the program number that you will make an adjustment to and then press the adjustment selection.

 **NOTE:** To the right would change to password being required to close lock (factory default in individual mode is no password












MASTER PASSWORD

PROG. NO SELECTION NO
 6 0

Program No	Selection No	Explanation:
0	1	Restores factory default settings: Prg No 1-0: Individual operation Prg No 2-1: Audible beeps and confirmations Prg No 3-0: Penalty operation is not active Prg No 4-0: Sets user password to factory default Prg No 5-0: Service password is not active Prg No 6-1: Closing without password active Prg No 7-0: Warning of open door is not active Prg No 8-0: Resetting user password is not active Prg No 9-0: Blocking of the lock is not active
	1	1 One-time-use operation (locker mode for multiple users) 0 Individual operation
	2	0 Mute operation except for warnings 1 Audible operation- button feedback, warnings and confirmations
	3	0 Penalty not active 1 Penalty active (lock blocked for 5 minutes if wrong code entered 3 times)
	4	0 Sets user default code to factory default (for forgotten combinations) 1 None
	5	0 Service password is not active 1 Service password is active
	6	0 Closing with password required is active 1 Closing without password is active (for individual usage)
	7	0 Warning of door open is not active 1 Warning of door open is active (beeps 8 times every 5 seconds)
	8	0 Resetting user password is not active (if service password is active) 1 Resetting user password is active (if service password is active)
	9	0 Blocking of the lock is not active (if service password is active) 1 Blocking of the lock is active after using service password (if it is active)